

S.24 Door – Handle Droop (Page 1 of 1)

M241 -v1

Please discuss with Seaglaze before actioning this instruction.

Unless stated otherwise all of our maintenance and repairing instructions require only basic hand skills. If in doubt please always ask your local yard for advice.

Warnings:

- Only use warm soapy water to clean any of our products. Do not use products such as acetone or bleach etc.

Equipment:

- Allen Keys (8mm & 2.5mm)
- 2 x Spanners (12mm)

Symptoms:

The handle and dogs are not staying in the desired position. All the handle and dogs still rotate together.

Action:

Removing the Panel

- Unscrew the allen key bolts which hold the dogs and handle on (8mm allen key) .
- Remove the dogs and handle. (If tight thread the bolts back in a couple of turns and just tap them with a hammer, this should free them up).
- (If the door has a lock)
- Using a 2.5mm allen key remove the grub screw which holds the thumb turn on.
- Remove the thumb turn.
- Remove the escutcheon plate.
- Pop out the panel from under the 'e' seal.

Tightening the Nuts

- Remove the locking pin (see image)
- Now all nuts should be tightened, not just the affected handle/dog. (1 nut per dog)
- Insert locking pin after each nut has been tightened.

While the panel is removed Seaglaze recommend considering doing maintenance checks on the whole door, please see M240—S.24 Door Maintenance.

Fix the door panel back in place.

END OF INSTRUCTION

