

Seaglaze are proud to supply and have a commitment to supplying quality products. If there are any issues please contact us .

Warnings:

- This requires a minimum of 2 people.
- Only use warm soapy water to clean any of our products. Do not use products such as acetone or bleach etc.
- Ensure that there is no damage caused to the frame while replacing the gas strut. If there are any scratches or chips these must be addressed immediately to avoid corrosion.
- Please be careful around an open window without the gas struts attached. The windows are heavy and can fall and slam shut.
- Only Marine grade screws of the correct length should be used. (csk screws, not raised heads.)

Replacing a Gas Strut:

- The first person need to hold the window open.
- The second person needs to remove the safety pins on the ball joints of the gas strut.
- Ensure the first person has a strong hold on the window to avoid the window slamming shut, this could cause damages to not only the window itself but could also cause injury.
- Remove the gas strut by applying force to the gas strut so the ball joint separates from the socket.
- Fix the new gas strut in place of the old one by pushing the ball joint and socket together.
- Replace the safety pins on the ball joints of the struts.
- Release window and check it open and closes smoothly.

END OF INSTRUCTION