


Sliding Window Spares Kit—CM KIT 002

S020 -v2

Seaglaze would always recommend the use of an experienced fitting team.



Where Things go:

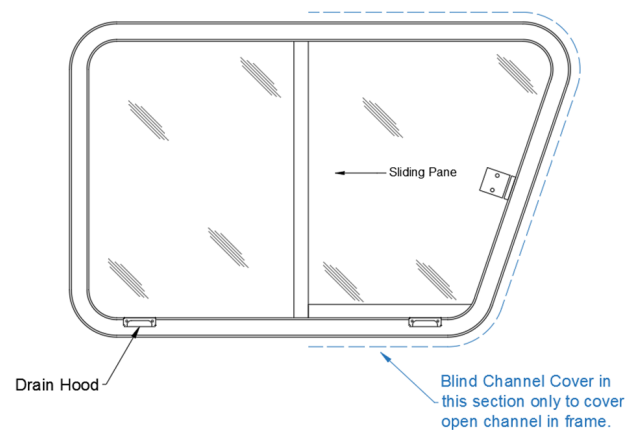


What's Included:

- 1x Flick over catch—FT CAT 160
- 1x Tri-Catch—CM CAT 001 A—Anodised Silver Satin
- 3m Brush Pile 4.8 x 6.0—SE SLD 044
- 3m Brush Pile 4.8 x 4.5—SE SLD 041
- 3m Flat Jag—SE SLD 120
- 3m Flock Sprayed Jag—SE SLD 102
- 2x Anodised Drain Hood—FT DRN 001 A
- 4m Blind Channel Cover—SE COV 001
- 1x Duralac—CO LUB 023
- 4m Block Rubber—SE CHF 004
- 1x 'D' Handle—FT HND 070 A—Anodised Silver Satin
- 4m Slider Bearer Rigid Track—SE SLD 200

Not all components will be used in every sliding window.

Equipment Required:

- Screw Driver
- Cleaning Materials

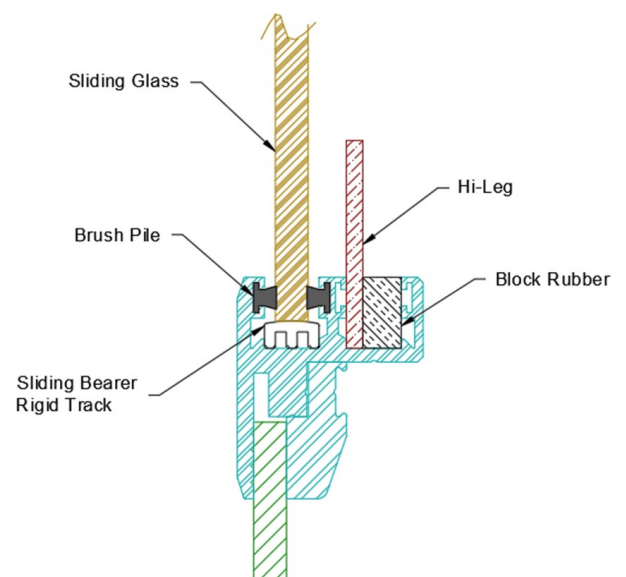

Sliding Window Spares Kit—CM KIT 002

S020 -v2

What things are used for:

- Flick over catch— To replace, remove screws and take off old flick over catch. Replace with new flick over catch and use screws to hold in place.
- Tri-Catch—To replace drill out rivets. (A blade may be needed to remove the tri-catch)
- Anodised Drain Hood—To replace, remove screws and take off old drain hood. Replace with new drain hood and use screws to hold in place.
- Blind Channel Cover—The old can be popped out using a suitable tool (eg. screwdriver) and the new one can then be pushed in.
- Duralac—Use this to coat all screws before fixing, this helps prevent corrosion.
- Block Rubber—The old one can be removed and new one push in, if it is difficult to get the new block rubber in soapy water can be used as a lubricant.
- 'D' Handle—To replace drill out rivets. (A blade may be needed to remove the handle)

The window will need to be removed to use/replace the following parts:

(For instructions on how to removed a window please see M351 and for instructions on how to disassemble and reassemble a window please see M352.)

- Brush Pile 4.8 x 6.0—Used to replace worn or damaged brush pile. For instruction how to replace please see instruction M410.
- Brush Pile 4.8 x 4.5—Used to replace worn or damaged brush pile. For instruction how to replace please see instruction M410.
- Flat Jag—Used to replace worn or damaged flat jag in sliding glass channel, this helps the glass run more smoothly. For instruction how to replace please see instruction M411.
- Flock Sprayed Jag—Used to replace worn or damaged flock sprayed jag in sliding glass channel, this helps the glass run more smoothly. For instruction how to replace please see instruction M412.

Other useful instructions include...

- Z010—Recommended products for maintenance

Find our other instructions at www.seaglaze.co.uk

Professional

Friendly

Expert